

# MERITOR® FASTSET™ NO REAM KING PIN KIT



**MERITOR**



**IDEAS DRIVING RESULTS**  
EFFICIENCY AND QUALITY.




## FASTSET KING PIN KITS QUICK REFERENCE GUIDE

FastSet Part Number	Axle Make	Axle Model	Stemco Kaiser Qwik Kit
R202002	Meritor	FF941 / FF931 / FF942	K961L
R202006	Eaton / Dana	E1202I/W, E1322I/W, E1462I/W	K147E
R202010*	Meritor	FG941 / MFS13 / MFS14	KG931R
R202011	Meritor	FL931 / FL941 / MFS18 / MFS20	KH931L
R202014	Meritor	FF931 / FF932	K931L
R202020	Eaton / Dana	I-132SG, I-140SG, I-140S, I-140W	K141S
R202031	Meritor	MFS73 / MFS16	K180R
R202035	Mack / Volvo	301SQ52A, 12000# FXL12, 14600# FXL14.6	K536M
R202056	Meritor	MFS66	K131R
R202001	Eaton / Dana	E1200I/W, E1320I/W	K122E

### \*Key Length for Kit R202010

Kit R202010 comes standard with key # 7X1003. Please note if you are replacing king pin kit for an older axle (pre 2001 production), you may need keys (x 2) with a smaller length i.e. # 7X112. Part # 7X112 is available for purchase separately. See image below.

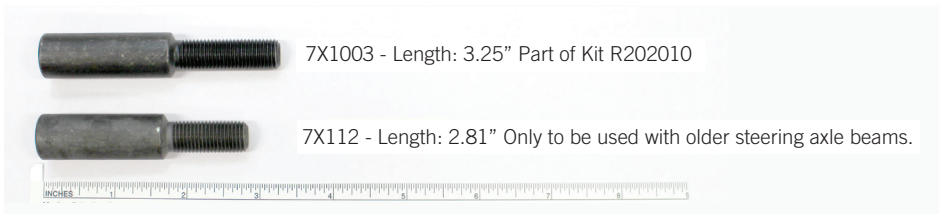

## Save Time And Money During Installation

The FastSet™ No-Ream King Pin Kit eliminates the need for reamers, presses and pressing in the bushings during installation. Available in multiple pin diameter and length sizes to fit your application.

### Advantages

- No pressing-in of bushings needed during installation
- **No reaming necessary** on king pin bushings
- Metal-to-metal componentry, for added strength



FastSet™ No Ream King Pin Kits

### Also Available:

#### T-Handle tool used to install the FastSet™ No Ream Spiral Bushings

- Fits all FastSet™ Spiral Bushings
- Helps make installation even faster and easier
- 6" Handle
- Part Number R212087
- Made in the USA
- Competitor tools can be used on the kits



For detailed installation instructions, please see notes inside kit packaging or alternatively, download instruction flyer TP1634 via Literature On Demand at [www.meritorpartsexpress.com](http://www.meritorpartsexpress.com).